

PROGRAMMING YOUR REMOTE TO YOUR TV

Turn on your TV.

1. On the remote control, press **TV** once; it will blink once. Then press and hold **SETUP** until the **TV** key blinks twice.
2. Type **9 9 1**. The **TV** key will blink twice.
3. Press and release the **CH+** key continuously, then stop when the TV turns off. Be patient as this may take several minutes to find the correct code.
 - a. **NOTE:** In the search mode, the remote control will send IR codes from its library to the selected device, starting with the most popular code first.
4. Press **POWER**. The TV should turn on, then press **SETUP** once to lock in the code. The LED will blink twice to indicate that the code is saved.
 - a. **NOTE:** If the TV does not turn on during step 6, then slowly press and release **CH-** to go back through the codes, then press **SETUP** when the TV turns on.
5. To search for the codes of your other devices, repeat steps 1 through 6, but substitute the appropriate key (e.g., **VCR**, **DVD**, **AUD**, or **STB**) for the device you are searching for.